



## How to Configure Cisco Nexus 9336C-FX2 Ports for Shared Cluster Storage

[https://kb.netapp.com/on-prem/Switches/Cisco-KBs/How\\_to\\_Configure\\_Cisco\\_Nexus\\_9336C-FX2\\_Por...](https://kb.netapp.com/on-prem/Switches/Cisco-KBs/How_to_Configure_Cisco_Nexus_9336C-FX2_Por...)

Updated: Sun, 05 Apr 2026 12:34:18 GMT

### Applies to

- Cisco Nexus 9336C-FX2
- ONTAP 9.9.1 and later

### Description

- When configuring a new setup of a Cisco Nexus 9336C-FX2 switch for shared cluster storage configuration, the task requires information found in [NetApp Hardware Universe](#), the [Cisco Nexus 9336C-FX2 cabling worksheet](#), and the [Cluster-HA-Storage RCF](#)
- [Cable shelves as switch-attached storage - NS224 shelves](#) covers the installation of the shelves in this configuration

- While the documentation above covers everything necessary for configuration, this article expounds on those steps to help provide clarity when performing this type of setup